



# JACKOBOARD®

Element za prhe  
Duschelement  
Shower unit

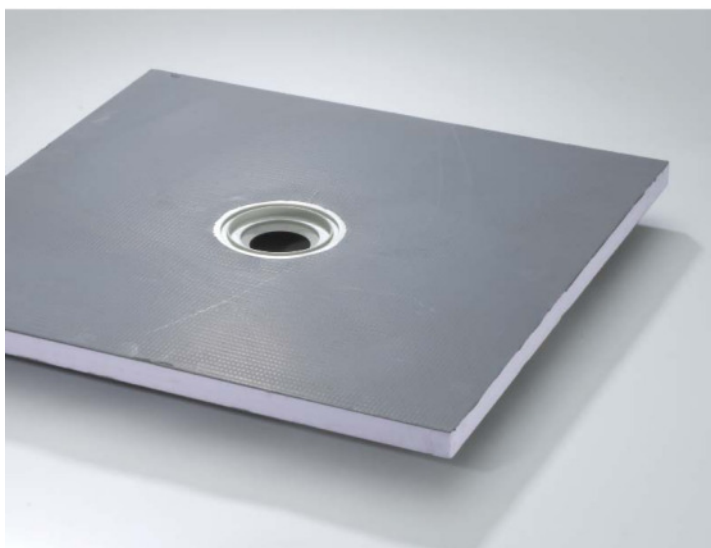


# Navodila za montažo / Verarbeitungshinweise / Assembly information Element za prhe / JACKOBOARD Duschelement / Shower unit

## Element za prhe / JACKOBOARD Duschelement / Shower unit Vertikalni sifon na betonski plošči / Ablauf senkrecht, aufgesetzt / Vertical drain, fitted

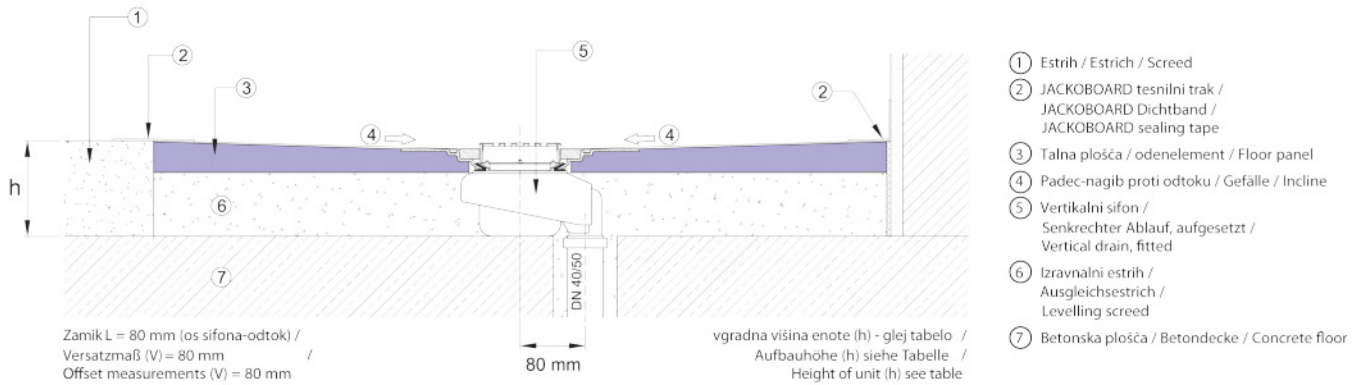

## Element za prhe / JACKOBOARD Duschelement / Shower unit Vertikalni sifon montiran v bet. plošči / Ablauf senkrecht, versenkt / Vertical drain, counter-sunk

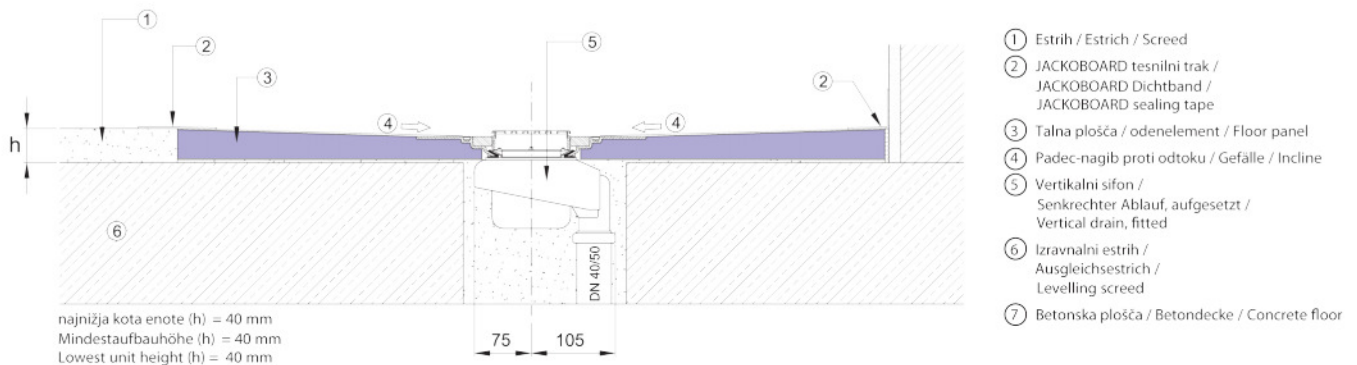

### Opozorilo:

Podatki v teh navodilih za montažo bazirajo na našem trenutnem znanju in izkušnjah in niso osnova za nikakršno pravno garancijo. Pri montaži morate vedno upoštevati posebne pogoje, ki se lahko od primera do primera razlikujejo, še posebej pa v smislu gradbenih uzanc.

### Zur Beachtung

Die Angaben in dieser Druckschrift basieren auf unseren derzeitigen Kenntnissen und Erfahrungen. Sie stellen keine Zusicherung im Rechtssinne dar. Bei der Anwendung sind stets die besonderen Bedingungen des Anwendungsfalles zu berücksichtigen, insbesondere in bauphysikalischer, bautechnischer und baurechtlicher Hinsicht.

### For your attention

The information in this leaflet is based on our current knowledge and experience. It represents no legal guarantee. When in use, the particular conditions of use are to be observed, in particular from a structural point of view and regarding building law.

JACKON Insulation GmbH ■ Carl-Benz-Straße 8 ■ D-33803 Steinhagen  
Telefon +49 5204 9955-0 ■ Telefax +49 5204 9955-400 ■ info@jackodur.com ■ www.jackon-insulation.com  
ALTEKS d.o.o., Slovenska cesta 31a, 4207 Cerklje na Gorenjskem, tel: 04/25 25 512, fax: 04/ 25 25 511,  
www.alteks.si, info@alteks.si